






## Illustrations of Terminology

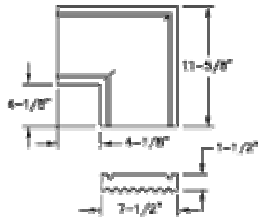


**M13 CF 4  
Corner Frame**

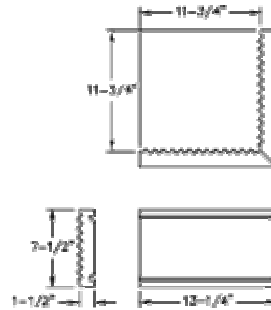


**M13 C 11-5/8  
Corner**




**M13 S 23-5/8  
Stretcher**

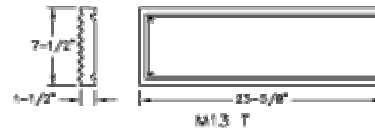


**M13 T 23-5/8  
Terminal**




**M13 TD 29-5/8  
Terminal Double**

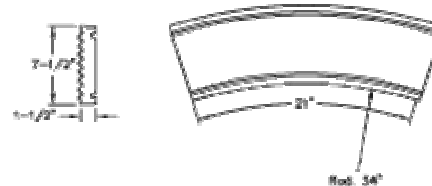


**M13 Rad.34  
Radial**

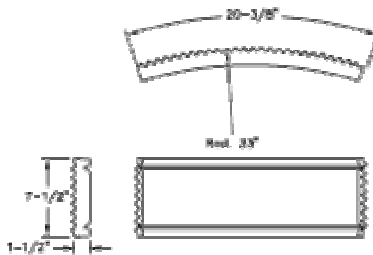


**M13 Rad.n33  
Intrados(concave)**

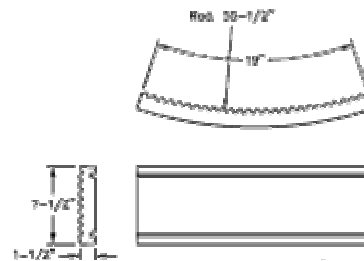


**M13 Rad.t 55-1/2  
Extrado (convex)**

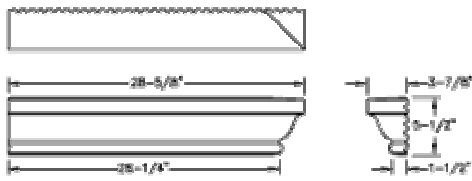

**M40 R 26-1/8 R**  
Return Right

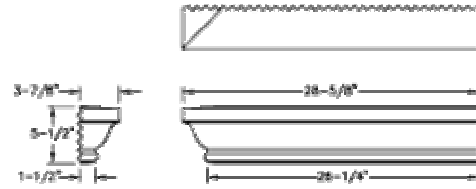

**M40 R 26-1/8 L**  
Return Left

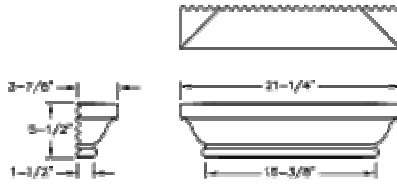

**M40 RD 16-3/8**  
Return Double